

# DeWalt Cordless Circular Saw

Model DCS393

## Safety & Use Instructions

- Do not wear loose clothing, jewelry or long hair when using this tool.
- Hold power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring.
- Use clamps or other methods to secure and support the workpiece to a stable platform.
- Wear safety glasses or ANSI Z87.1 compliant safety goggles.
- Keep a firm grip on the tool at all times.
- Only use 20v DeWalt battery packs supplied by the Pitsco Idea Shop.
- Remove battery after use and place on recharging station.
- Seek assistance from Pitsco Idea Shop staff with any questions.


## Specific Saw Safety

- Use only for cutting wood. Treated or previously painted wood should not be cut with this tool in the Pitsco Idea Shop
- DANGER: Keep hands away from cutting area and the blade. Keep your second hand on auxiliary handle, or motor housing.
- Do not reach underneath the workpiece
- Adjust the cutting depth to the thickness of the workpiece.
- Never hold piece being cut in your hands or across your leg, secure the workpiece to a stable platform.
- When ripping always use a rip fence or straight edge guide.
- Always use blades with correct size and shape (diamond versus round) of arbor holes. Seek assistance from Pitsco Idea Shop staff for help with saw blades.
- Never use damaged or incorrect blade washers or bolt.
- Keep a firm grip with both hands on the saw and position your arms to resist kickback forces. Position your body to either side of the blade - not in line with the blade.
- When blade is binding, or when interrupting a cut for any reason, release the trigger and hold the saw motionless in the material until the blade comes to a complete stop. Never attempt to remove the saw from the work or pull the saw backward while the blade is in motion or kickback may occur.
- When restarting a saw in the workpiece, center the saw blade in the kerf and check that saw teeth are not engaged into the material.
- Support large panels to minimize the risk of blade pinching and kickback. Large panels tend to sag under their own weight. Supports must be placed under the panel on both sides, near the line of cut and near the edge of the panel.
- Blade depth and bevel adjusting locking levers must secure before making cut.
- Use extra caution when making a “plunge cut” into existing walls or other blind areas. The protruding blade may cut objects that can cause kickback.

## User Manual (pdf)

Blade	Diameter	Teeth	Application
DW9155	6-1/2" (165 mm)	18	General purpose cutting
DW9154	6-1/2" (165 mm)	24	Smooth woodcutting
DW9153	6-1/2" (165 mm)	90	Non-carbide, plywood/ vinyl siding cutting

Fig. A

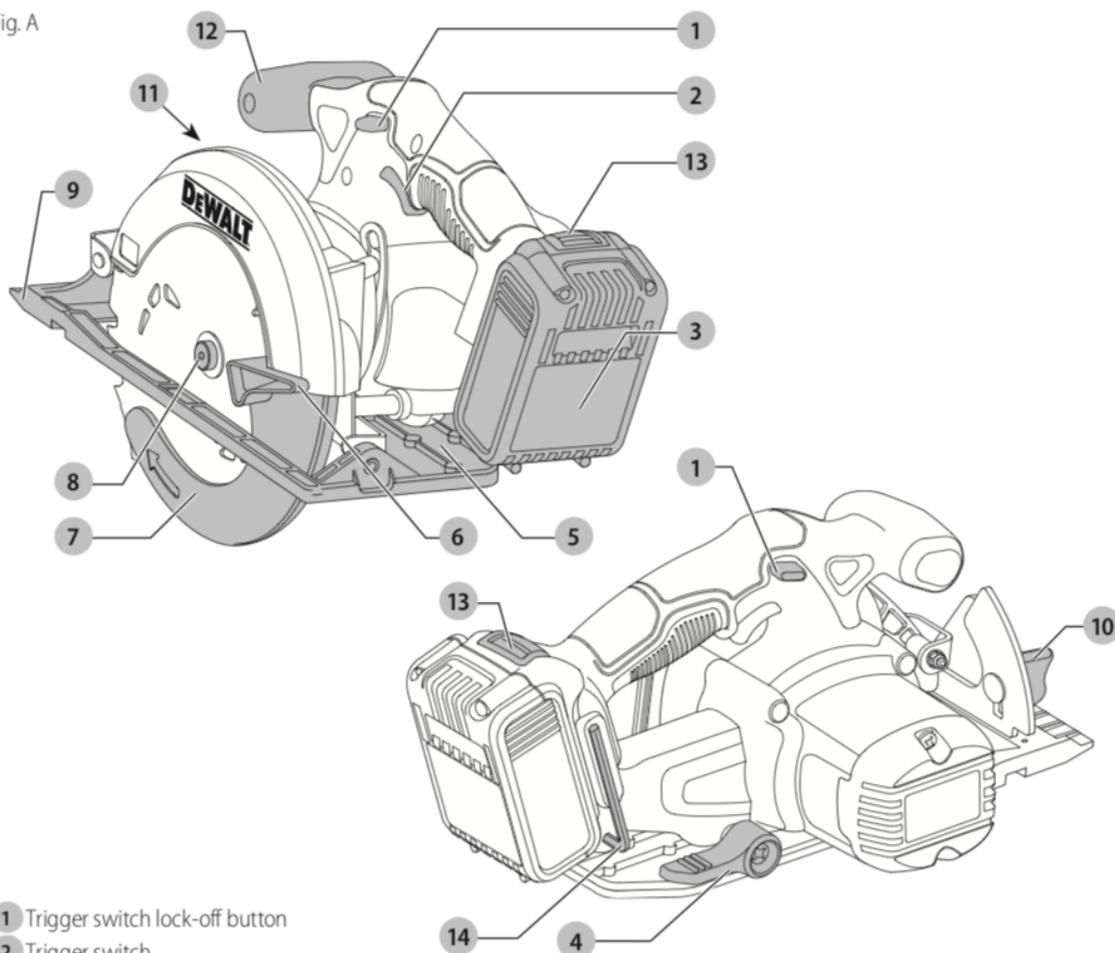

- 1 Trigger switch lock-off button
- 2 Trigger switch
- 3 Battery pack
- 4 Depth adjustment knob
- 5 Shoe
- 6 Lower blade guard retracting lever
- 7 Lower blade guard
- 8 Blade clamping screw
- 9 Kerf indicator
- 10 Bevel adjustment knob
- 11 Blade lock button (not shown)
- 12 Auxiliary handle
- 13 Battery release button
- 14 Blade wrench

**⚠ WARNING!** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

**📖 WARNING:** To reduce the risk of injury, read the instruction manual.

If you have any questions or comments about this or any DeWALT tool, call us toll free at:  
1-800-4-DeWALT (1-800-433-9258).